




# ETERNYTIME RACER

INSTALLATION SETUP

## with Elite Decoder

### 1. Direct installation

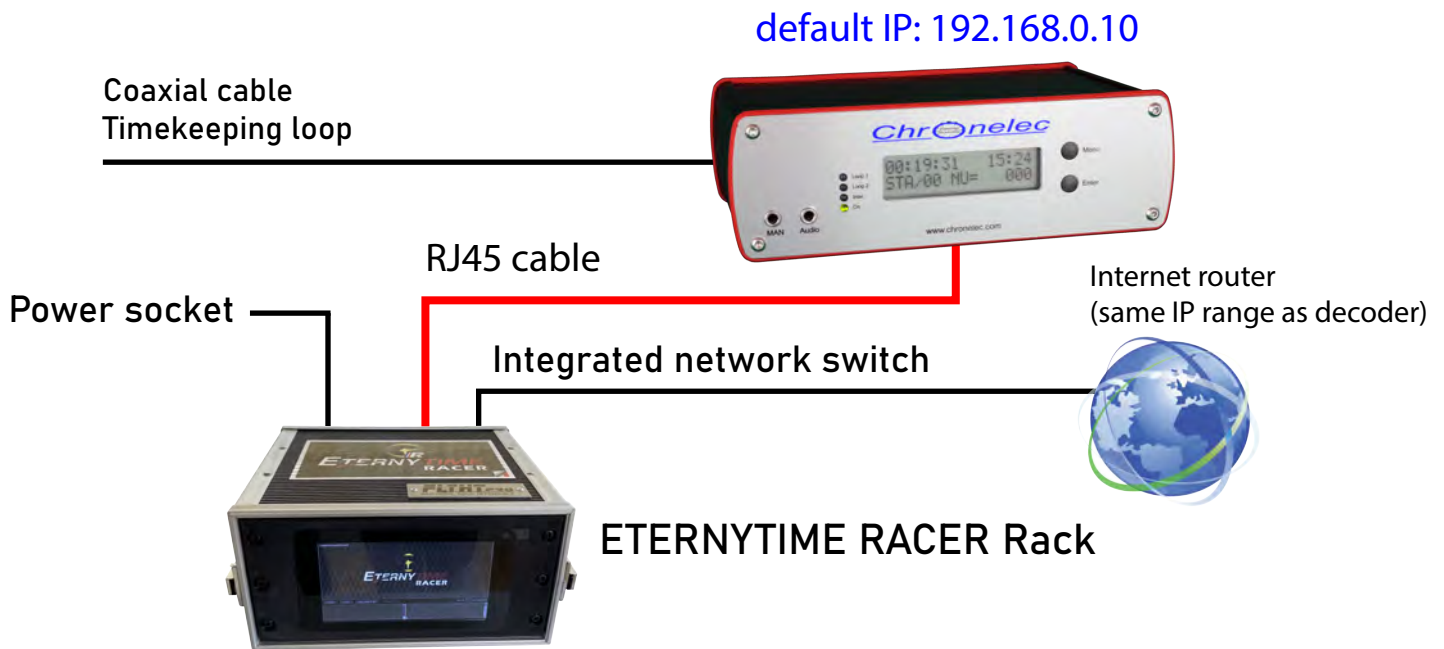

The ETERNYTIME Racer server uses DHCP to get it's IP automatically. Internet connexion and timekeeping decoder should be on same IP range. ex. Internet router: 192.168.0.1 and decoder 192.168.0.10

### 2. Parralel installation with full timekeeping setup

Same installation as mentionned above.

Uncheck the **Acquit ACK** checkbox as the timekeeping software will provide the ACK to the decoder